

## HOW DO I ...

### ... Adjust Audio Levels?

1. Click "Function" in the upper left-hand corner of the touch screen
2. Click "Mic. Level" or the picture of a microphone
3. Use the arrows on the bottom left of the screen to turn audio up or down.

(Try to have the audio bouncing into the yellow, but avoid hitting red)

### ... Erase Video Clips?

1. Press the "Playback" button on the side of the camera
2. Click the check box in the low right-hand corner
3. Select the clips you wish to delete by clicking on them
4. Click "Edit" in the lower left-hand corner
5. Click "Delete"

### ... Fix headphones if they make a buzzing noise

1. Click "Function" in the upper left-hand corner of the touch screen
2. Press "Menu"
3. Press the wrench tab
4. Scroll down to highlight "AV/Headphones" and press the button
5. Select "Headphones"



Canon Vixia Cheat Sheet